
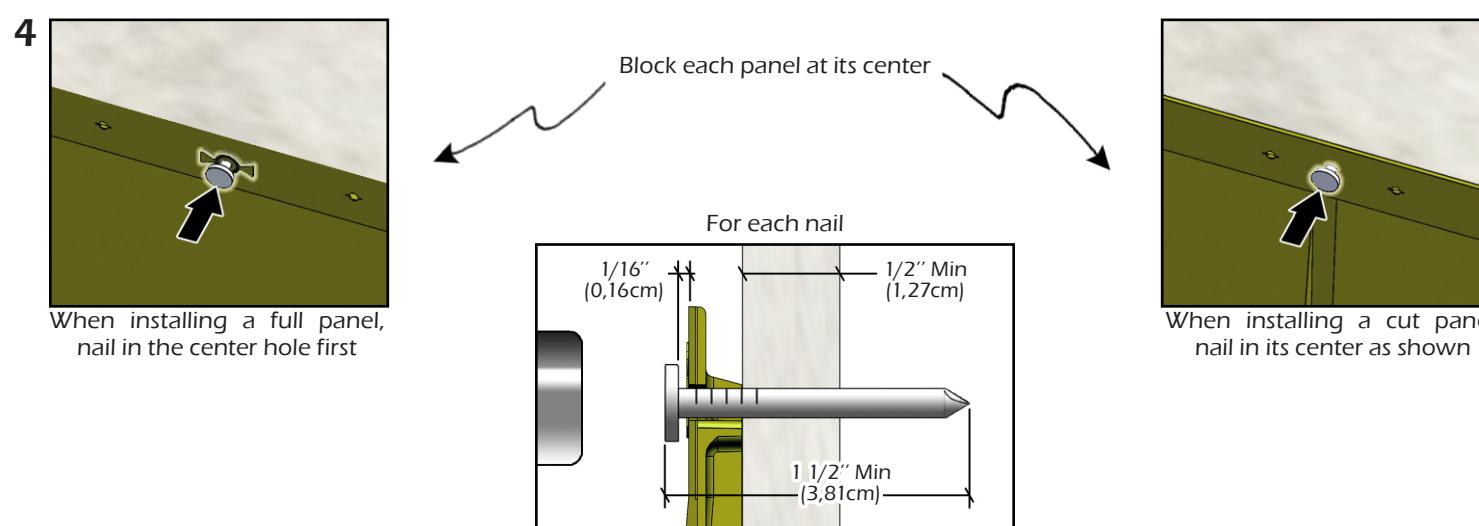
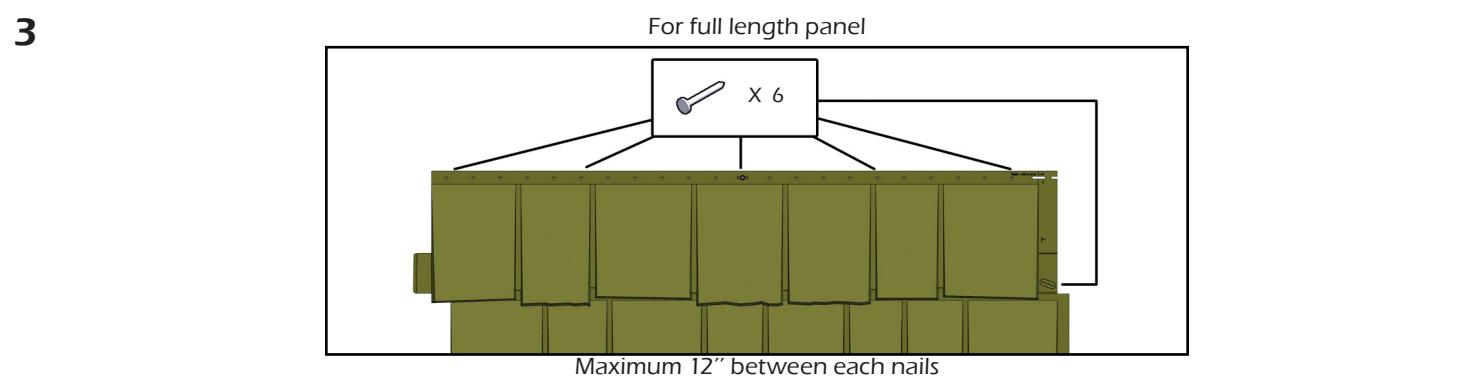
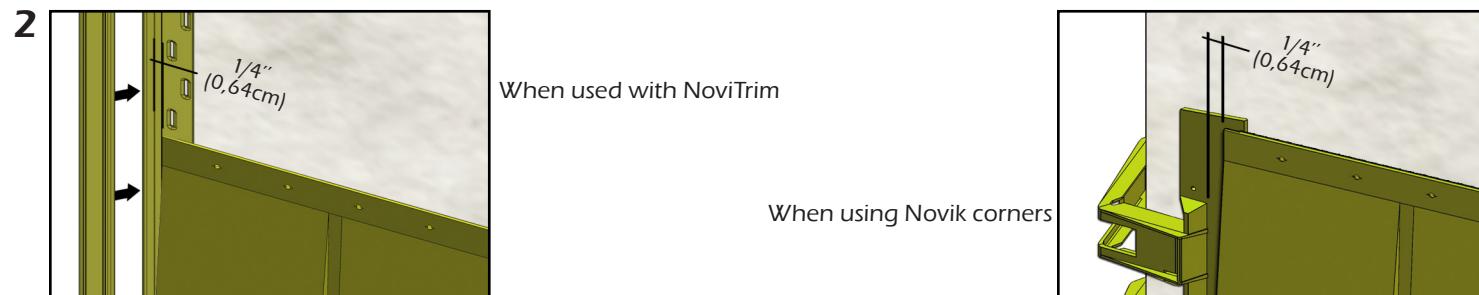



NOVIKSHAKE™ HS - HAND-SPLIT SHAKE SUMMARY INSTALLATION GUIDE

CAUTION: ALWAYS INSTALL PRODUCT FROM LEFT TO RIGHT AND REMEMBER THAT POLYMER UNDERGOES EXPANSION/CONTRACTION DUE TO TEMPERATURE VARIATIONS.


FRANÇAIS
AU VERSO

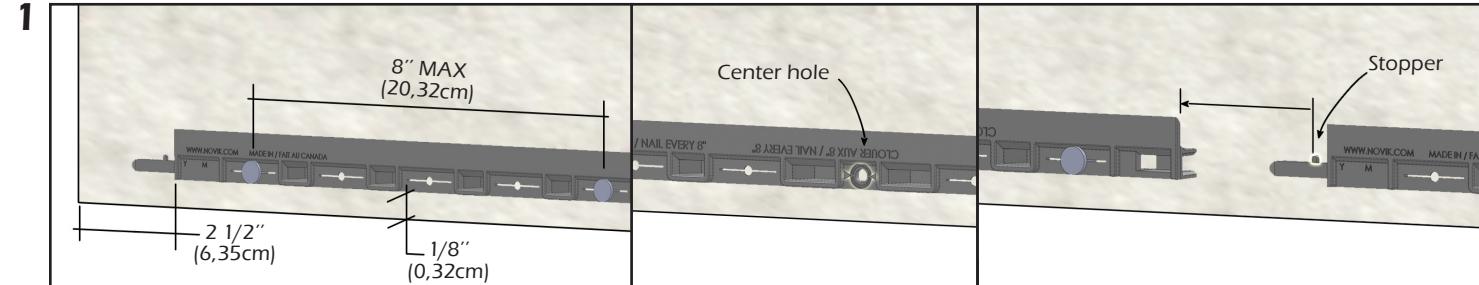




5 Installation when outdoor temperature is above 40°F(5°C), press against stopper/reference mark.

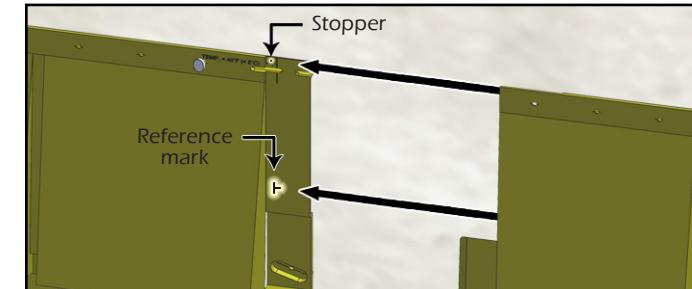

Installation when outdoor temperature is below 40°F(5°C), stop at the temperature line.

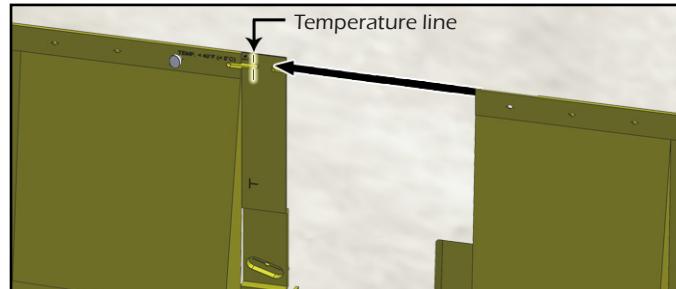


6 Alternate the joints between rows

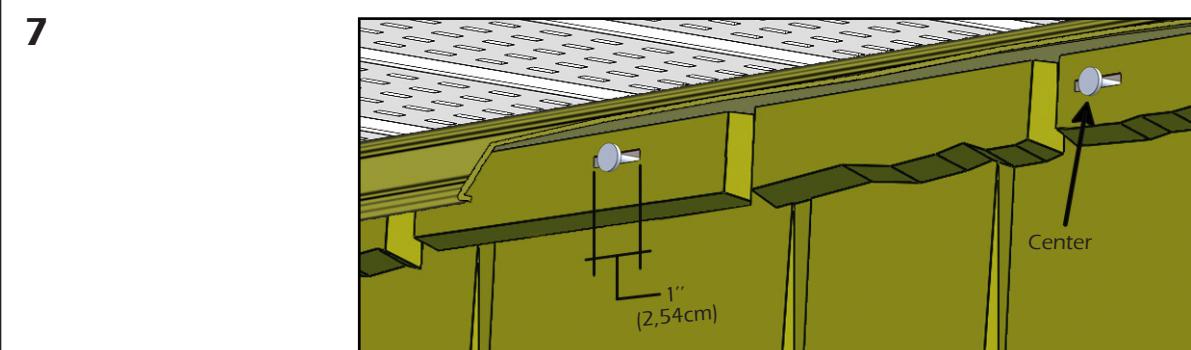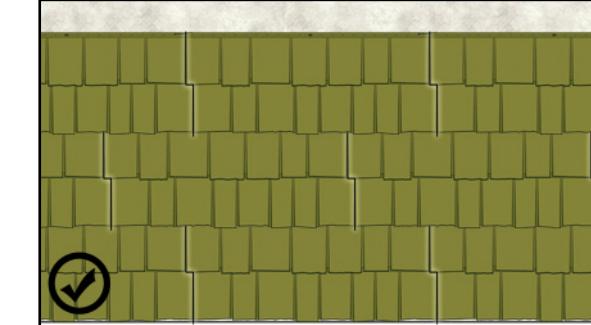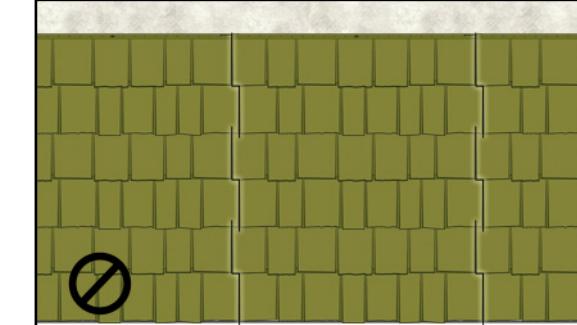

If you need to attach the siding in an area other than the installation hole, create a 1"(2,54 cm) long slot to allow nailing. Always nail in the middle of the slot.

NOVIK CORNER INSTALLATION

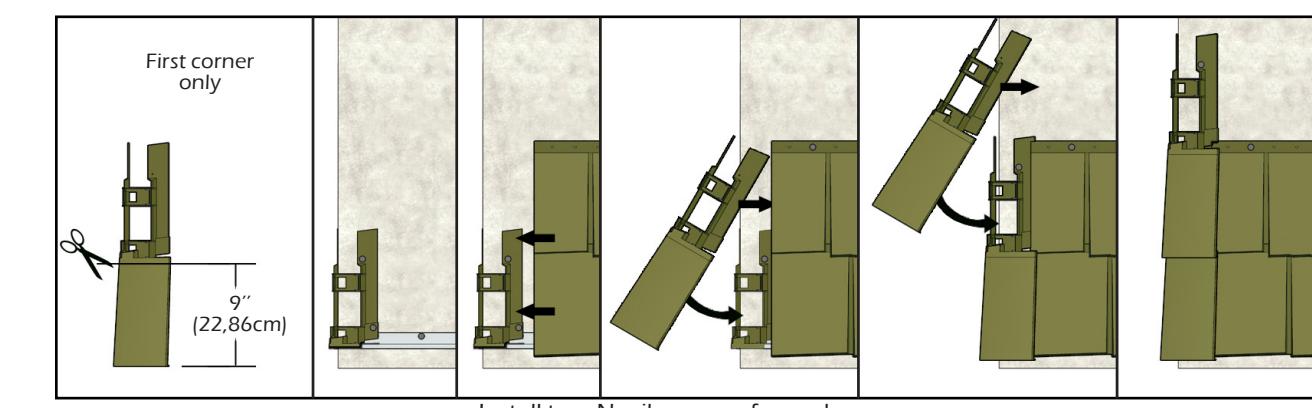

See www.novik.com for the complete installation guide.

NOVIK





2016/04/20

DIV0263C


NOVIKSHAKE^{MC} HS - BARDEAU RUSTIQUE GUIDE D'INSTALLATION SOMMAIRE

ENGLISH
REVERSE


ATTENTION: TOUJOURS INSTALLER LE PRODUIT DE LA GAUCHE VERS LA DROITE ET NE JAMAIS OUBLIER QUE LES POLYMERES SUBISSENT DE L'EXPANSION/CONTRACTION DUES AUX VARIATIONS DE TEMPERATURE.

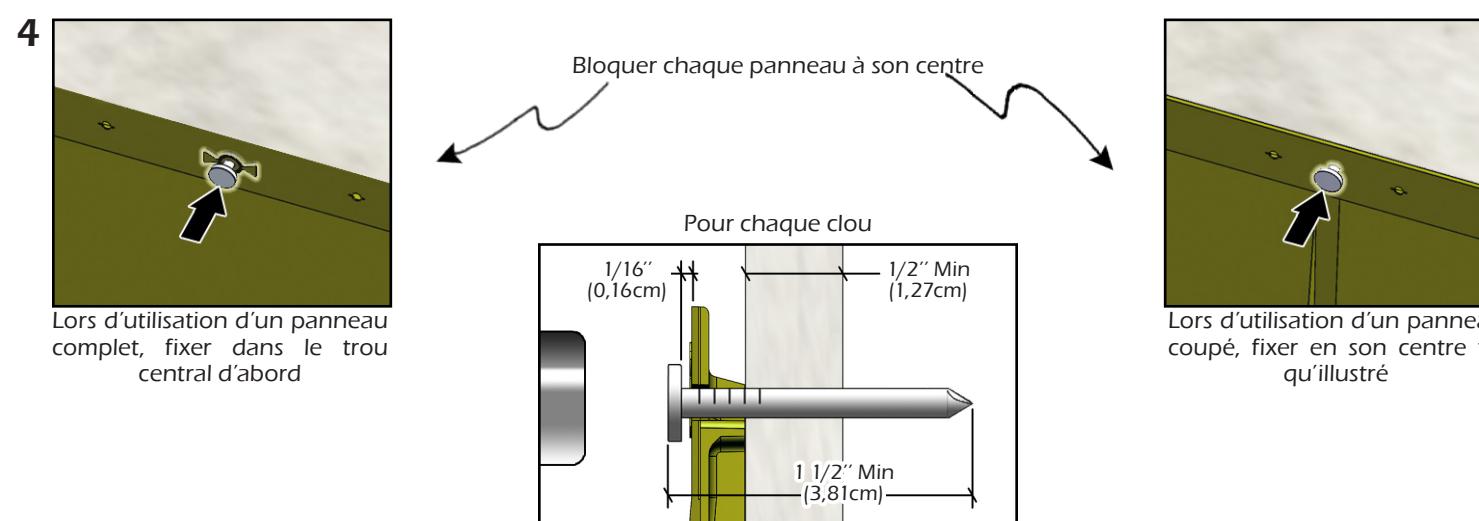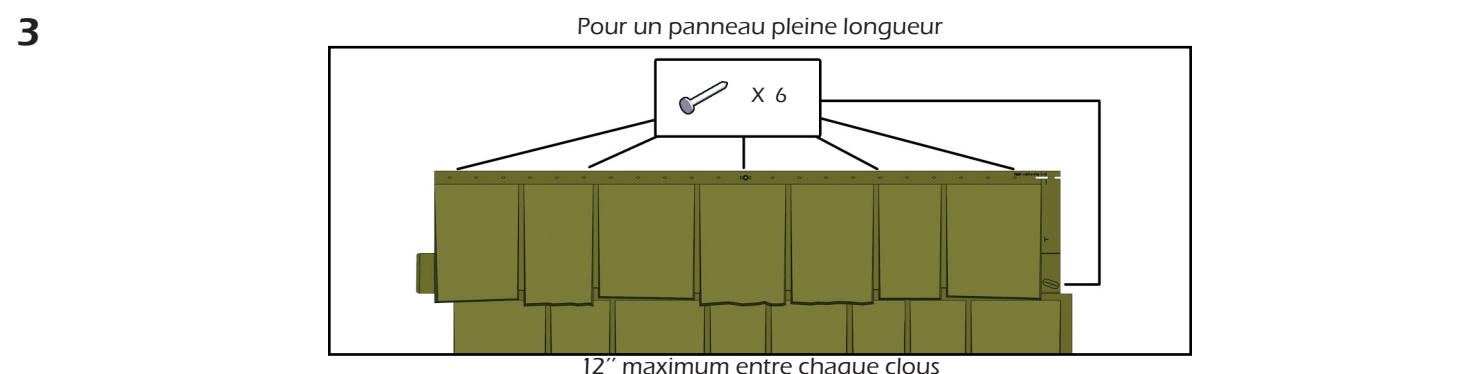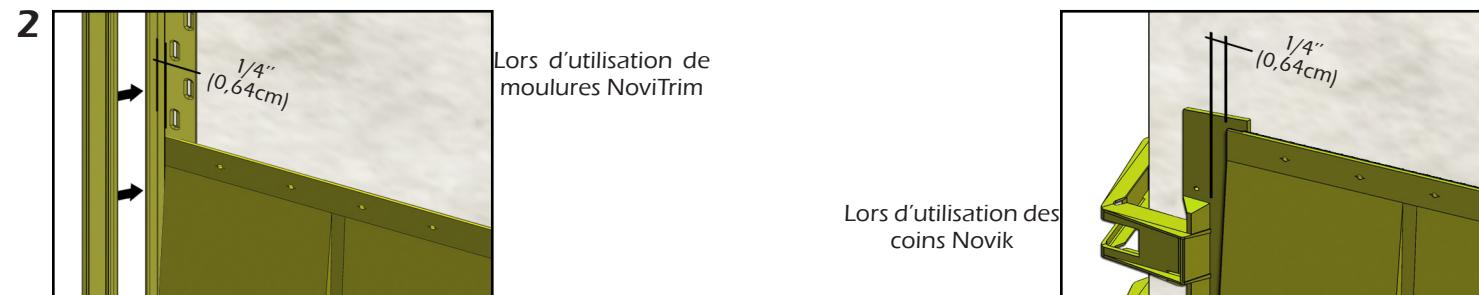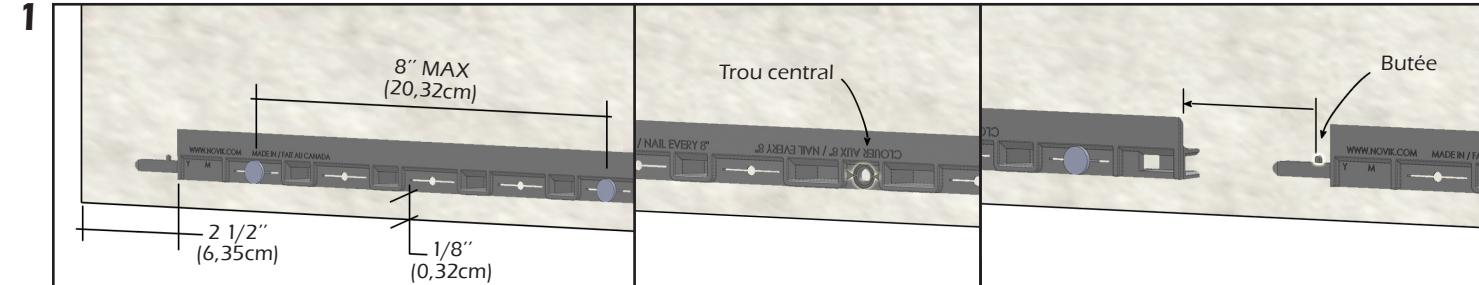




5 Installation à une température extérieure supérieure à 40°F(5°C), arrêter à la butée/repère visuel.

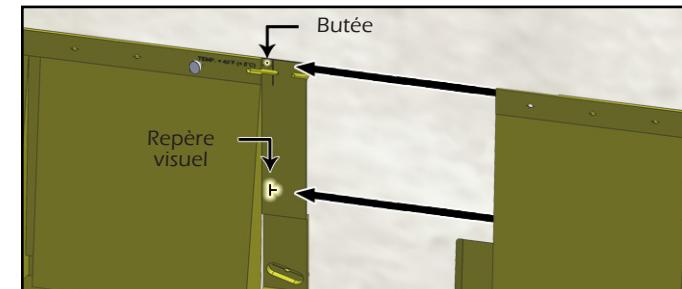

Installation à une température extérieure inférieur à 40°F(5°C), arrêter à la ligne de température.

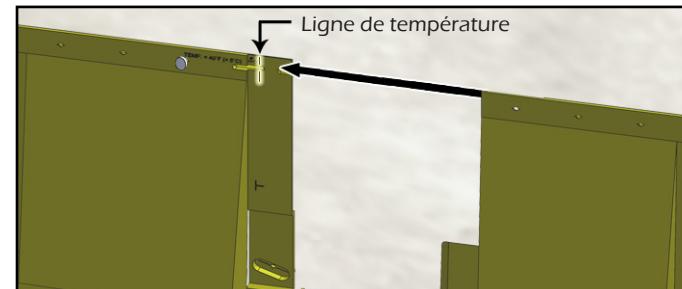

6 Alterner les joints entre les rangées

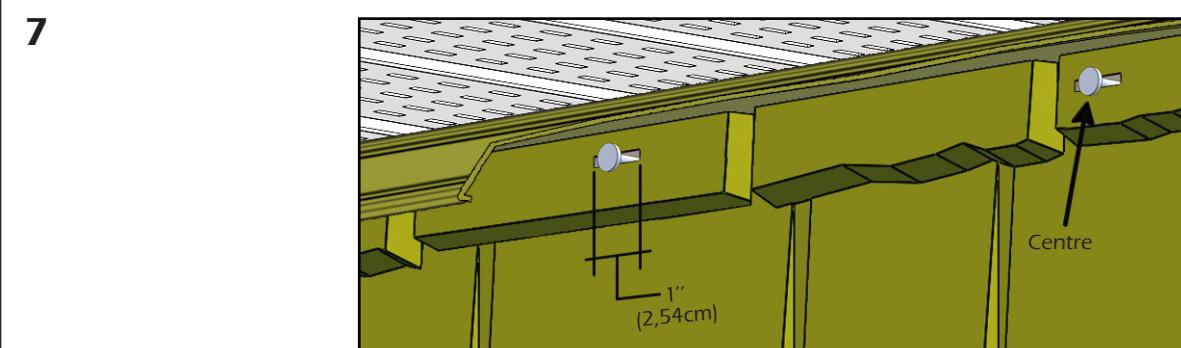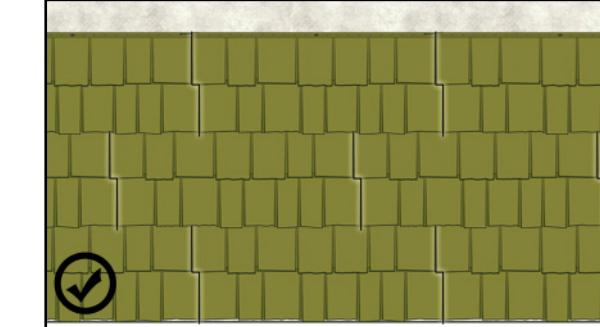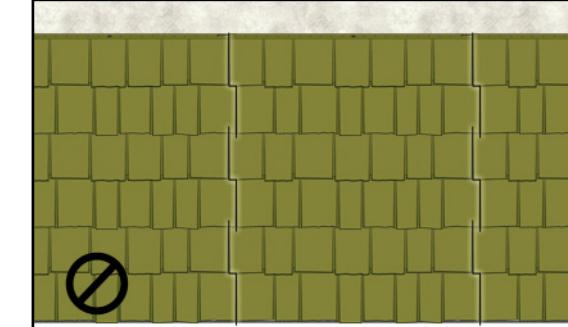

Si vous devez fixer les panneaux dans un endroit autre que dans les trous de fixation, faire une fente de 1"(2,54 cm) pour permettre de clourer. Toujours clourer au centre de la fente.

INSTALLATION DES COINS NOVIK

